



GL1500 PTT Bracket Installation Instructions


For Goldwings without the 4 mm tapped hole shown, remove the 5 mm Phillips head bolt

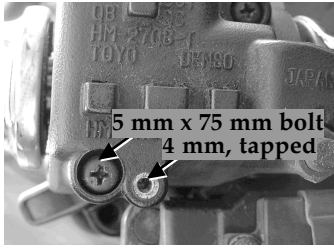

Align the bracket flush with bottom vents as shown

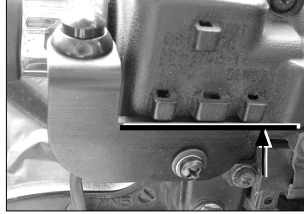

For Goldwings with the 4 mm tapped hole, attach the bracket to the bike using the 4 mm screw, flat washer and internal tooth lock washer included in this kit

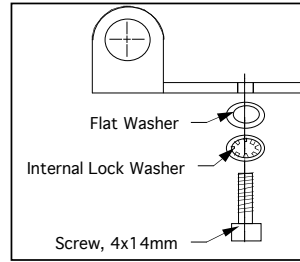

For Goldwings without the 4 mm tapped hole, attach the bracket to the bike using the 5 x 80 mm bolt included with this kit.

Route the PTT cable down handle bar and connect the PTT cable plug to the Kennedy device (or extender cable, if required for your installation)